



WEIGHT 2.8KG

PRINTABLE PDF INSTRUCTION



HTTPS://BUSCHMANNTOOLS.COM/FALZCUTTER/ENG

OUR LINKS

HTTPS://BUSCHMANNTOOLS.COM/

HTTPS://WWW.FACEBOOK.COM/BUSCHMANNTOOLS/

HTTPS://WWW.INSTAGRAM.COM/BUSCHMANNTOOLS/



Homepade



Instagram

Facebook

Copyright © 2020 Buschmann Tools. All rights reserved.



FALZ CUTTER

Falz Cutter is intended for double-lock standing seam metal roof dismantling, It dissects double-lock standing seam connection places.

Falz Cutter can be positioned at any double-locked standing seam point which makes it possible not only to remove connection places of the roof, but to cut out area for various types of needs for example ventilation shafts and roof windows.

ECHNICAL DATA

We recommend to use 110+ NM Accumulator Drill Machines Start from 60 NM for soft roof segment

MAX. THICKNESS

- STAINLESS STEEL: 0.5 MM
- MAX. SPEED
- ALUMINUM, COPPER, ZINC: 0.8 MM . 30 M/ MIN
- STEEL: 0.7 MM












MANUAL


ENG

CORRECT USAGE

- When setting up the Falz Cutter we must remove and make sure that Accumulator Drill machines accumulator is removed from the Accumulator drill machine
- Only when we are definitely sure that everything is connected properly only then we place the battery inside the Accumulator drill machine and start working!
 - Position the Accumulator Drill machine on the 10mm rotating hex cap head axle and tighten it.
- Tighten the Power-Drill inside the Holder with the key that comes (2) with the the tool. The holder must be tightened until the holder sides stops against the Accumulator Drill machine,
- Adjust and Tighten the stabilization bar. One side must be positioned (3) right by the Falz Cutter specific side and other side must adjusted right by the Drill machine angle so the stabilization bar stops by Accumulator drill machine.
- BEFORE INSERTING THE BATTERY IN ACCUMULATOR DRILL MACHINE, READ THE

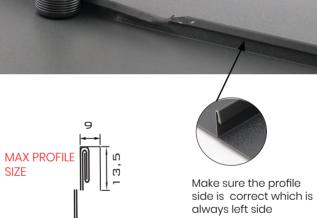

Doppel-Stehfalz.

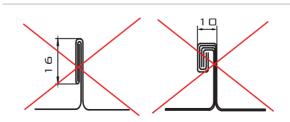

NOT POSSIBLE

MPORTANT SAFETY INFORMATION FOR OPERATING THE FALZ CUTTER

- Always make sure before setting up the tool remove the accumulator from the power drill!
- When performing operation that's not associated with the cutting task the accumulator must be removed from the power drill!
- Carefully read all safety information before operating the FALZ CUTTER and save it for future reference.
- As a matter of principle, any person who is put in charge with the start-up, operation, maintenance and repair of the machine must have read and understood the operating instructions, specifically the chapter on safety.
- When working with FALZ CUTTER on a roof, always use roof lifeline and follow all safety regulations
- Before using FALZ CUTTER for the first time, carefully remove all packing materials.
- Always make sure that FALZ CUTTER is properly assembled before using.
- During the work hold hands, fingers, hair, clothes and other tools at a safe distance. Never place your hands, fingers or tools between the discs. Do not overreach. Keep proper footing and balance at all times.
- Stay alert. Watch what you are doing. Use common sense. Do not operate tool
- when you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating may result in serious personal injury. Do not wear loose clothing or jewellery. Keep your hair, clothing, and gloves away
- from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts.
- After using FALZ CUTTER, make sure that the tool isn't wet and then placed in the box. If sand and dust accumulate around the discs clean them.
- Do not expose the FALZ CUTTER to extreme temperatures, it is not recommended to operate the device in cold weather (below zero degrees). Do not expose FALZ CUTTER to rain or use them under moist or wet condition.
- This tool is not intended for use by children. Ensure that children do not have access to the FAL7 CUTTER
- When FALZ CUTTER and accesories are not in use, keep them in a safe place.
- It is strictly forbidden to put and keep a wet FALZ CUTTER in a case.

OPERATING INSTRUCTION OF FALZ CUTTER

- The FALZ CUTTER is to be operated exclusively by qualified and authorised persons who must know the national accident-prevention rules.
- Obligated to check the FALZ CUTTER for externally visible damage and defects before starting work and to notify and eliminate any changes (including the operation behavior) that affect the safety.
- Sight-checking all screws- tighten screws if necessary.
- Position the Falz Cutter with the Drill machine
- Check if the roof dimensions of profile are within the maximum allowable dimensions, see "Correct usage" page.
- If a profile is needed to be cut by full lenght then cutting wheels must be placed at the beginning of the metal roof (cutting discs must be each on different side) And start the cutting process. (Make sure that the profile side is on the left side)
- If it's necessary to start the cutting process from the middle of the profile then place the Falz Cutter on the profile (cutting discs must be each on different side) Tilt the Accumulator Drill machine by 20 - 30 degrees and start the cutting process. Tilting the Accumulator drill machine by 20 - 30 degrees to the opposite side the Falz Cutter can be expelled. (For this option we recommend powerful Accumulator drill machine) 110+ NM
- The Accumulator Drill Machine works clockwise and Falz Cutter is operating in forwards direction

! DO NOT let comfort or familiarity with product (gained from repeated use) replace strict adherence to safety rules for the subject product. MISUSE or failure to follow the safety rules stated in this instruction manual may cause serious personal injury. !

- thicker than 9 mm
- Make sure you're not using impact driver!

CARE, MAINTENANCE AND STORAGE OF FALZ CUTTER

- the tool
- Clean the device every time after using it. .
- Clean FALZ CUTTER from moisture dust and sand.
- Always keep aears clean.
- Check all screws periodically.

WARRANTY

We guarantee that all FALZ CUTTER is made of high guality materials and does not have any manufacturing defects. In case your device turns up the following defects, we will eliminate them in accordance with the law free of charge. Therefore, we give 1 (one) year limited warranty on our tools from the date of invoice. Limited warranty applies only to first sale. You must contact the company that has sold the product to file claims. Be sure that You have the purchase document! The device must be delivered for repair

in a complete set.

If FALZ CUTTER is repaired by an unqualified person, we can no longer guarantee the quality of the device. Also, we can not guarantee the quality of the device if:

- have been used on incorrect working methods;
- have been used with unsuitable accessories;
- the tool is used for unforeseen purposes: .
- the tool is used after detection of a defect;
- the tool used by a person without the necessary skills;
- the tool was uncared for; •
- the construction and parameters of the tool have been changed. •

Purchase Document.

POSSIBLE OPERATION FAILURE PREVENTION

If the Accumulator drill machine is making TRRRRRRRRRRRRR sound make sure that the Accumulator drill machine is in drilling option (not the screwing option) If the Falz Cutter is not going forwards and bukse, then possibly metal profile is

If the Accumulator drill machine gets hot and can't withstand the load then possibly metal profile height is above the maximum allowable height

Always make sure the battery is disconnected from the drill and only then clean

Keep the rotary parts free from dust, sand and moisture.

It is strictly forbidden to put and keep a wet or damp FALZ CUTTER in a case.

the tool is mechanically damaged, dropped off or otherwise broken;

The FALZ CUTTER is a complex combination of mechanical parts and has a lot of moving and wearing off parts. Wearing off parts is a normal phenomenon, not a production defect. In result of normal usage, worn parts will not be exchanged for free. Make sure the Device Model and Serial Number and Date of Purchase are correctly marked on the